CCS Technical Documentation
NPM-2NX Series Transceivers

Assembly & Disassembly Instructions

Issue 1 07/02
©Nokia Corporation

Contents

Page No

Assembling the NPM-2NX Transceiver 3
Exploded NPM-2NX Assembly 3
Step-by-Step Assembly Instructions 4
1. Insert Speaker (and gasket) to A-cover assembly 4
2. Insert Keymat to A-cover 4
3. Insert microphone to system connector 5
4. Insert LCD-module to PWB 5
5. Insert LCD / PWB assembly to A-cover 6
6. Insert D-cover assembly 6
7. Insert antenna 6
8. Insert screws 7
9. Insert antenna-cover to NPM-2NX assembly 7
10. Insert dust cap for rf-connector 8
Additional assembly instructions 8
1. Insert type label to metal deck 8
2. Insert battery to NPM-2NX assembly 9
3. Insert battery-cover to NPM-2NX assembly 9
4. Insert IR-window to A-cover assembly 10
Exploded D-cover assembly 10
Disassembling the NPW-2NX Transceiver 11
Preparation for Disassembly 11
Disassembly Tools 11
ESD Protection 11
Step-by-Step Disassembly Instructions 12
1. Remove battery-cover from Mozart assembly 12
2. Remove dust cap for rf-connector from antenna cover 12
3. Remove antenna-cover from Mozart assembly 12
4. Remove screws 13
5. Remove antenna 13
6. Remove D-cover assembly 13
7. Remove parts from D-cover assembly 14
8. Remove LCD / PWB assembly from A-cover 15
9. Remove LCD-module from PWB 15
10. Remove Keymat from A-cover 15
Additional disassembly instructions 16
1. Remove battery from Mozart assembly 16
2. Remove speaker and speaker gasket from A-cover 16
3. Remove IR-window from A-cover assembly 17
4. Remove LCD gasket from A-cover 17
5. Remove microphone from system connector 17

©Nokia Corporation

Assembling the NPM-2NX Transceiver

Exploded NPM-2NX Assembly

Figure 1: All parts and subassemblies of NPM-2NX

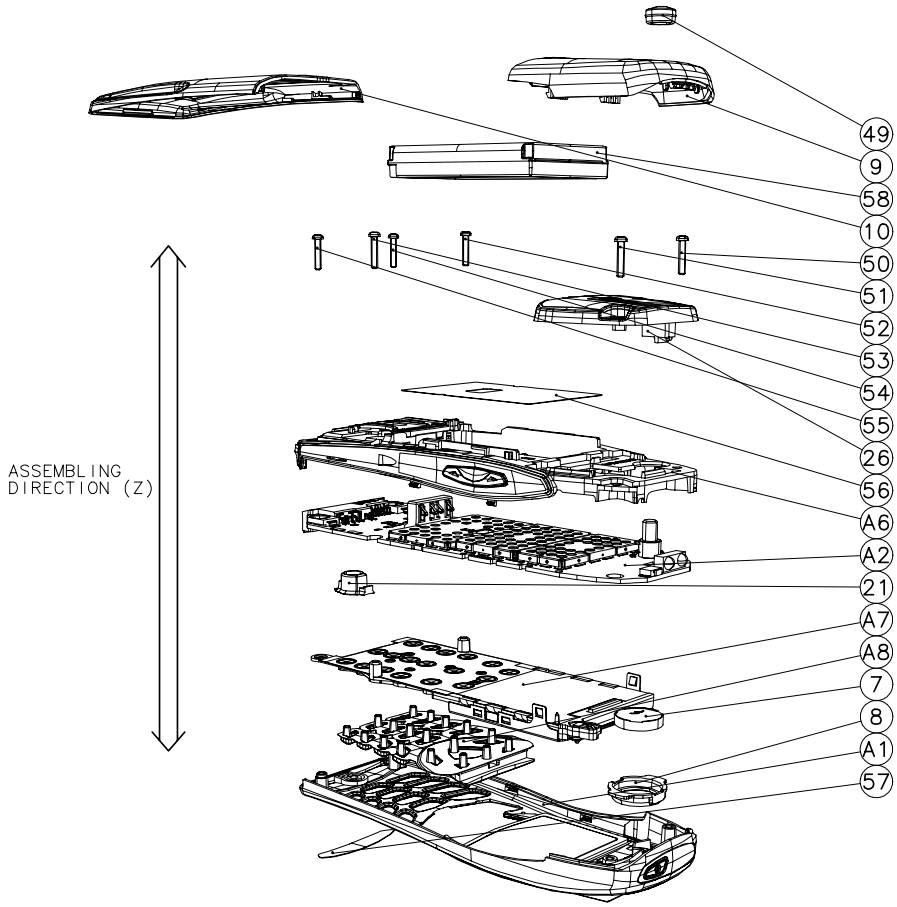

©Nokia Corporation

Step-by-Step Assembly Instructions

Wear cover gloves or finger covers and a wrist strap when assembling the phone.

1. Insert Speaker (and gasket) to A-cover assembly

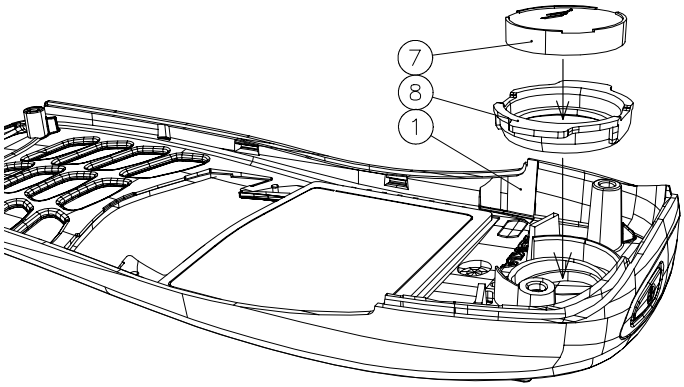

Insert a speaker and a gasket together before assembling to A-cover. Be careful with the speaker's springs.

Note: Alignment: Speaker gasket's "wings" towards A-cover's screwing towers.

2. Insert Keymat to A-cover

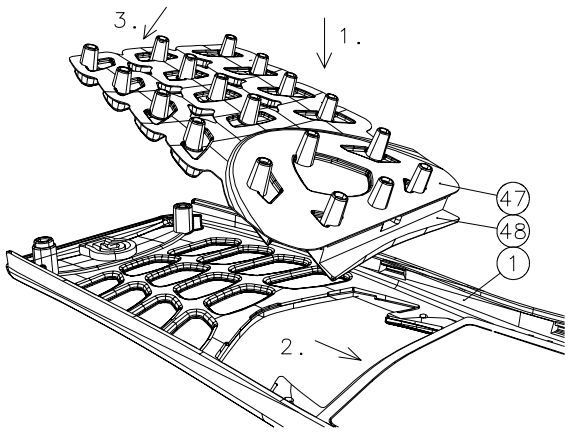

Follow steps 1-3 as shown in the figure. Pass the softkey (48) under the A-cover (1) flip. It is tight but it will pass. Focus key embosses to holes located in A-cover.

©Nokia Corporation

3. Insert microphone to system connector

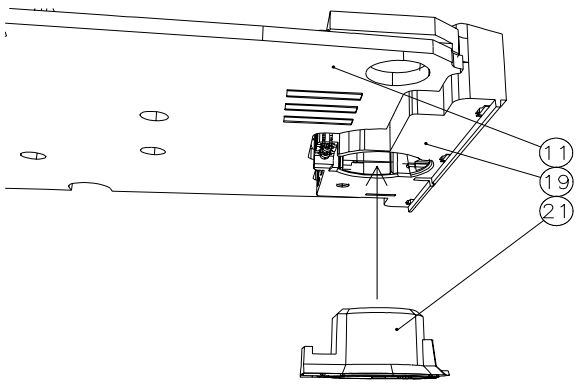

Look at the figure above carefully.

4. Insert LCD-module to PWB

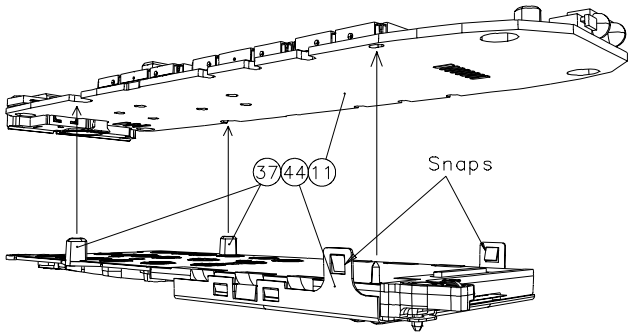

Remove the display cover tape first. The display “face” needs to be blown with ionized air before assembling. Focus pin at upper end of lightguide (37) to hole in PWB (11) and screw towers of lightguide to cutouts on edge of PWB.

LCD module is properly assembled when snaps joints in metal frame (44) clicks to PWB.

Blow a LCD-module, Module and an A-cover with ionizer.

Note: Ensure that there is no any dirt on the window.

©Nokia Corporation

5. Insert LCD / PWB assembly to A-cover

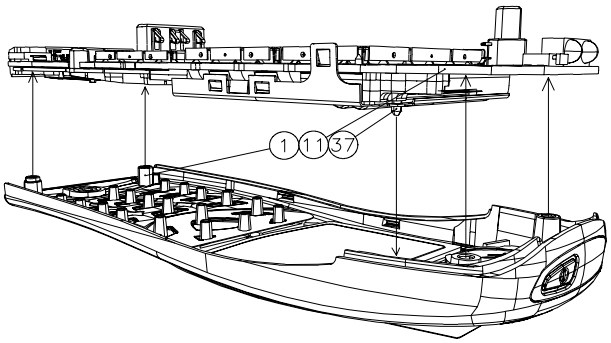

Before assembling LCD / PWB assembly to A-cover, check the placement of speaker assembly in A-cover. Screw towers in A-cover guides LCD / PWB assembly.

6. Insert D-cover assembly

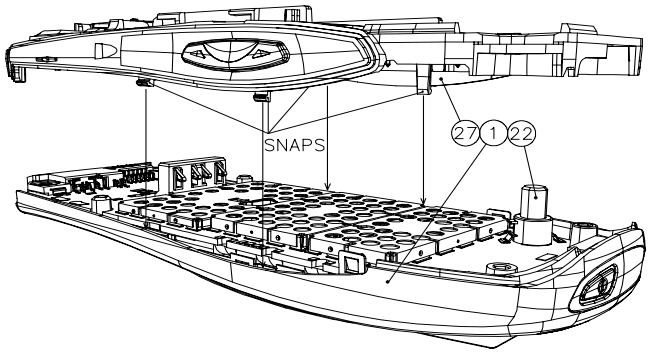

D-cover (27) is correctly inserted when you feel four snap joints clicking onto the A-cover (1). Push the D-cover assembly downwards quite hard. Be careful not to damage the springs of the battery connector (25) by metal deck (28).

7. Insert antenna

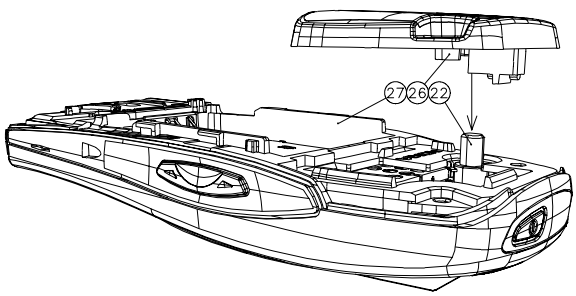

Wear gloves or rubber fingertips when handling the antenna (26). The antenna needs to undergo a visual inspection (flash, discoloration, etc) before assembling. Assembling guidance is in antenna connection to PWB (Rf-connector (22)).

©Nokia Corporation

8. Insert screws

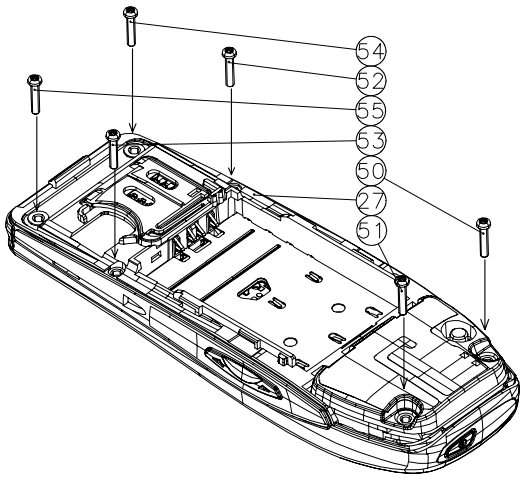

The estimated torque according to the screw trial for the all six screws is 22 Ncm and speed of rotation 480 rpm by using Torx+, 1.8x9 Deprag, automatic feeding 708U driver. Screwing order for pre-production is 50, 51, 52, 53, 54, and 55. Screwing order possibilities for testing purposes is limited to six (3!=3x2x1=6).

9. Insert antenna-cover to NPM-2NX assembly

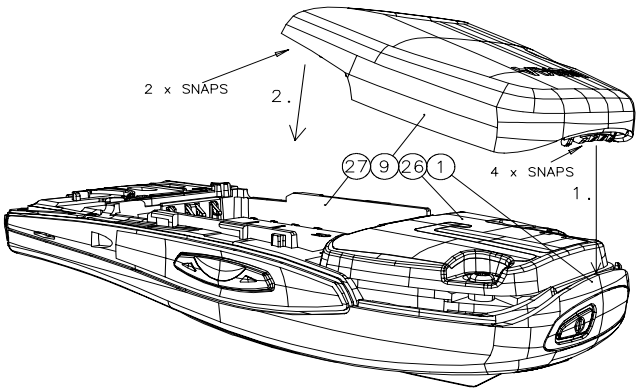

In step one, push the front end of the antenna cover downwards until it snaps from four snap joints in it. Be careful not to break them. Step two shows how to click the two lower and bigger snap joints last.

©Nokia Corporation

10. Insert dust cap for rf-connector

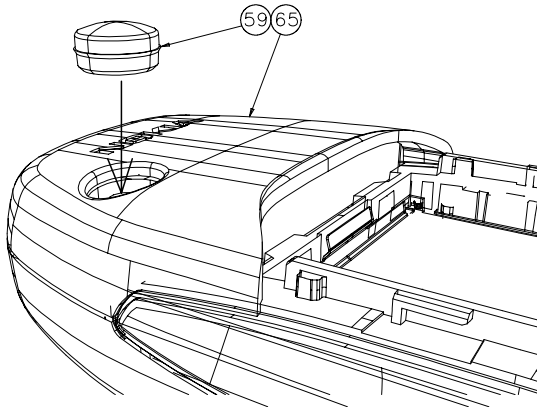

Push the dust cap downwards until it reaches the top surface of the antenna cover.

Additional assembly instructions

1. Insert type label to metal deck

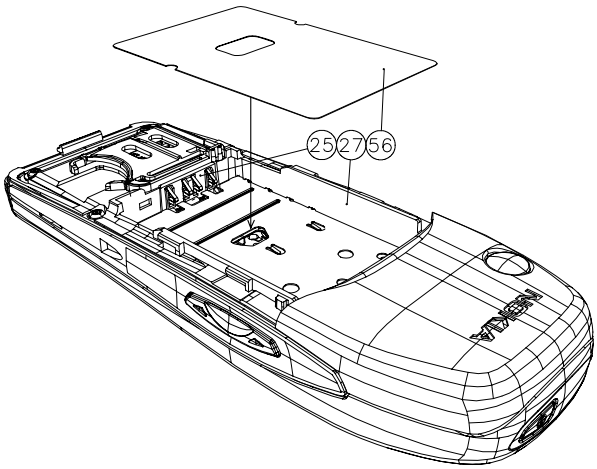

Focus type label (56) hole to hole located in metal deck (28).

©Nokia Corporation

2. Insert battery to NPM-2NX assembly

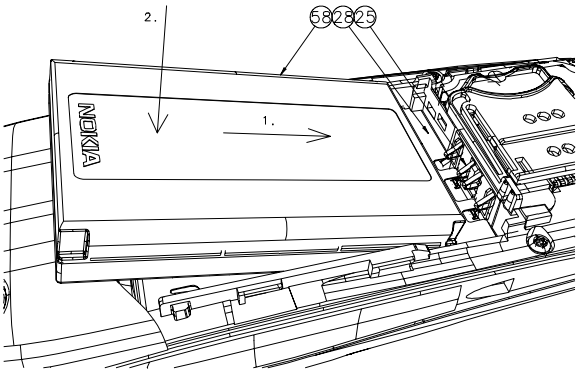

In step one, push the battery (58) against the springs of the battery connector (25).

In step two, push the battery from its front end downwards until it snaps onto the metal deck (28).

3. Insert battery-cover to NPM-2NX assembly

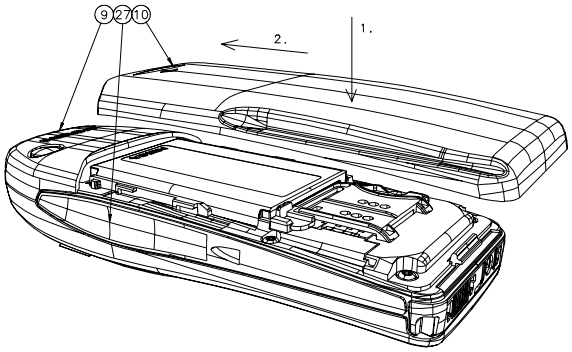

In step one, push the battery cover (10) downwards in the Z-direction until it hits the D-cover (27). In step two, push the battery cover towards the antenna cover (9) until it snaps from the front-end snap joint in it. Make sure all five (two on each side and one at the bottom end) bonding hooks of the battery cover are properly hooked.

©Nokia Corporation

4. Insert IR-window to A-cover assembly

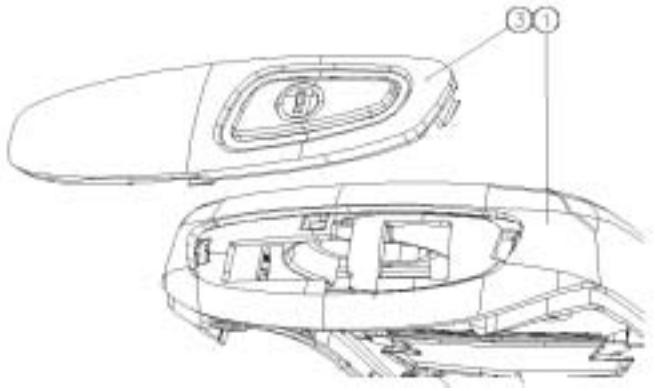

The IR-window is properly inserted when all four snaps are locked.

Exploded D-cover assembly

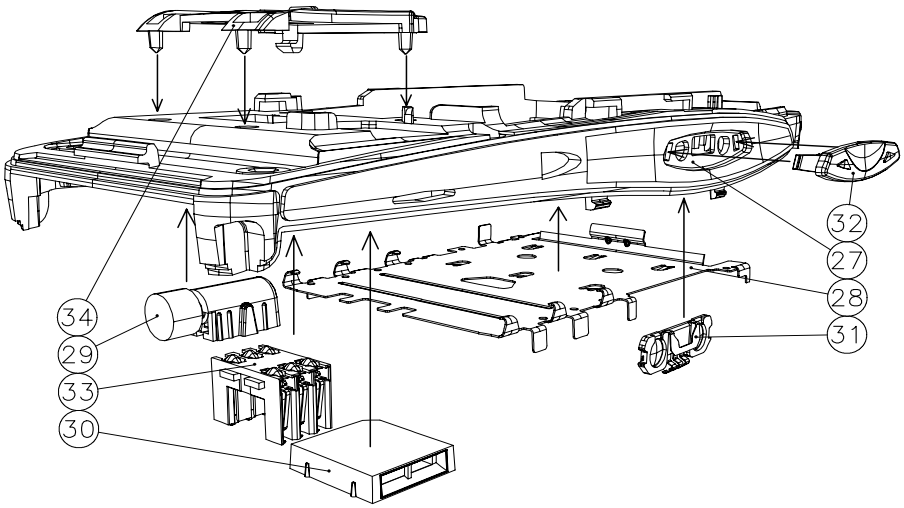

Insert volume key (32) before volume switch (31). Push metal deck (28) downwards from its sides near hooks until it snaps into D-cover (27). Push vibrator (29), SIM reader (33) and buzzer (30) into their places in D-cover. Check the correct position of SIM-Reader.

Heat stake SIM latch and metal deck using soldering iron, for example.

©Nokia Corporation

Disassembling the NPW-2NX Transceiver

Preparation for Disassembly

Disassembly Tools

Shown left to right: Torque-limiting screwdriver (torque set at 22N-cm), fiberglass soldering aid, and T6 Torx+ driver.

ESD Protection

Some form of ESD protection should be used when handling the PWB and other electronic components. The photo above shows a wrist strap, which can be grounded to a bench. This or some other form of ESD protection should be used when handling the phone.

©Nokia Corporation

Step-by-Step Disassembly Instructions

1. Remove battery-cover from Mozart assembly

Slide battery cover backwards in Y-direction while pushing hard from its middle front area using your thumb. Slide the battery cover long enough to release snap joints and hooks on sides of it.

2. Remove dust cap for rf-connector from antenna cover

Lift dust cap upwards from its hole using your fingernail or a screwdriver with a chisel point.

3. Remove antenna-cover from Mozart assembly

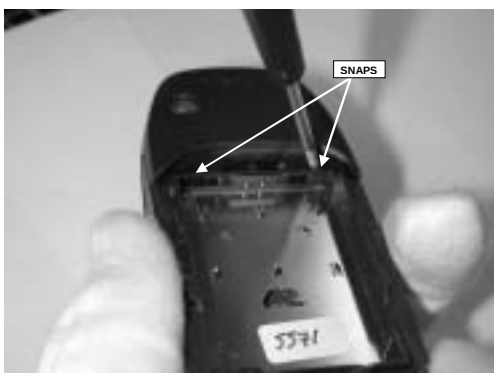

Release two snap joints one after another, first at the rear end of the cover. Use a screw-driver as a lever arm between the D-cover and the Antenna-cover.

©Nokia Corporation

4. Remove screws

The estimated optimal torque for the all six screws is 22 Ncm and the speed of rotation 480 rpm. The unscrewing order for pre-production is in the reverse order to screwing; 55, 54, 53, 52, 51, and 50. The screwing order possibilities for testing purposes is limited to six (3!=3x2x1=6).

5. Remove antenna

Wear gloves or rubber fingertips when handling the antenna.

6. Remove D-cover assembly

The D-cover is correctly removed when the four side snap joints of the D-cover are released from the A-cover. Use your fingernails or a screwdriver with a chisel point between the A and D-covers at the middle of the snap joint area to do the operation.

Note: Screwdriver must not hit the engine module or components on it during disassembly. Be also careful not to scratch covers.

On the next page you can see the removal operations of the subassemblies and parts of

©Nokia Corporation

the D-cover assembly.

7. Remove parts from D-cover assembly

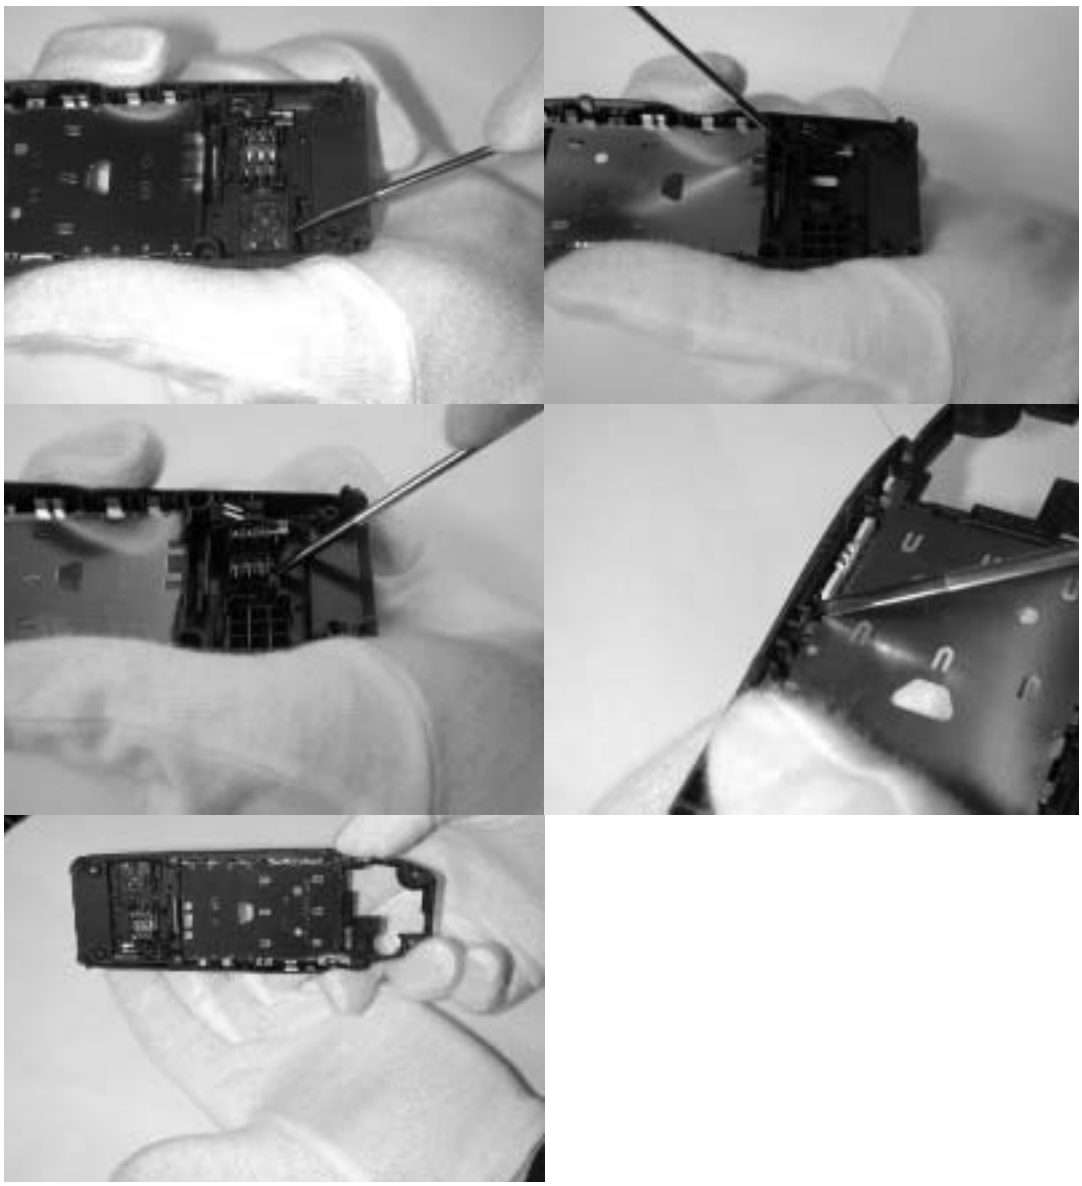

Lift vibrator, SIM reader and buzzer out of their slots of D-cover using screwdriver with chisel point or your fingertips. Release both snap joints of volume key before disassembling volume switch.

©Nokia Corporation

8. Remove LCD / PWB assembly from A-cover

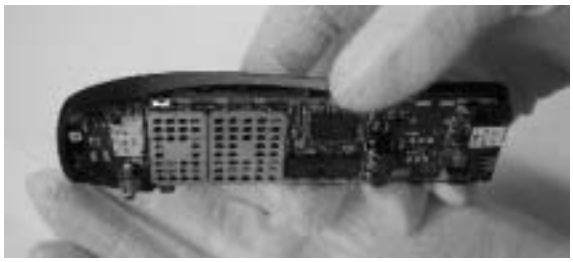

Screw towers in A-cover guides LCD / PWB assembly.

Note: Gloves and ESD protection are mandatory in this phase of disassembly to prevent fingerprints and damage in engine.

9. Remove LCD-module from PWB

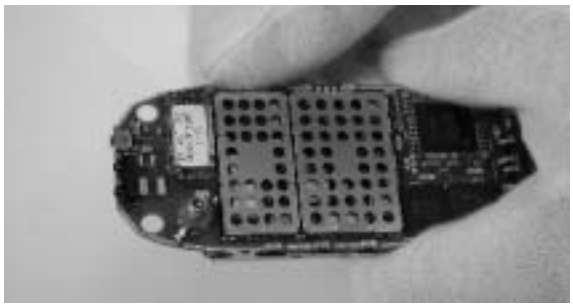

LCD module is properly disassembled when two snaps joints in metal frame are released from PWB.

Note: Gloves are mandatory if LCD-module will be reused. Also use ionized air for clean dirt from LCD before assembling it back to A-cover. Handle the elastomer connector with care.

10. Remove Keymat from A-cover

Lift keymat upwards from its rear end first. Then slide softkey away from its recess.

©Nokia Corporation

Additional disassembly instructions

1. Remove battery from Mozart assembly

Option 1: Lift battery upwards from its front end first by using screwdriver or your fingertip.

Option 2: Use your palm as a cup while hitting phone slightly towards the cup, battery side down.

2. Remove speaker and speaker gasket from A-cover

Remove speaker and gasket by lifting from gasket using screwdriver or your fingertip.

Note: Do not touch the springs of speaker as they can be damaged.

©Nokia Corporation

3. Remove IR-window from A-cover assembly

Start with snap joint at the middle of IR-lens by pushing it with screw driver with chisel point. There are four snap joints altogether.

4. Remove LCD gasket from A-cover

Tear gasket off from A-cover starting from the corner shown in figure above.

5. Remove microphone from system connector

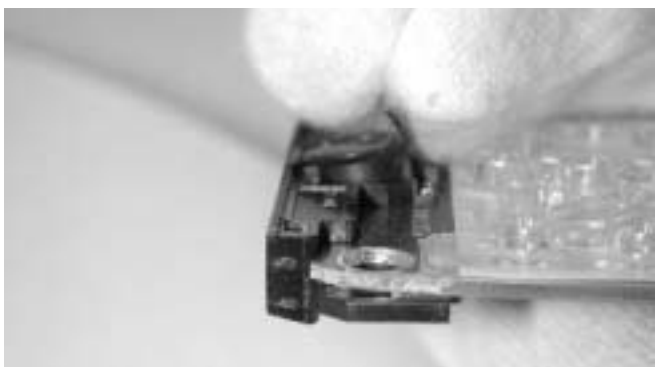

Lift microphone and gasket out from system connector.

©Nokia Corporation

This page intentionally left blank.

©Nokia Corporation